




Wall Mount Bracket Quick Installation Guide

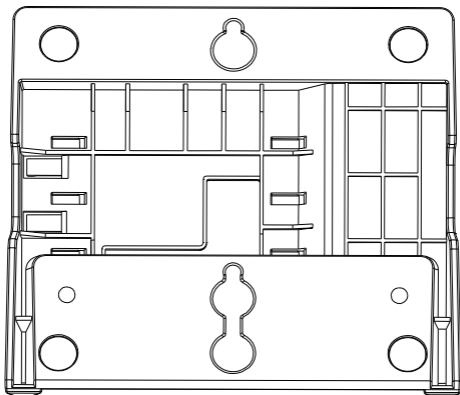

1. Package Contents

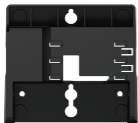

Wall Mount Bracket



Quick Installation Guide





Screw

2. Physical specification


| Model | Size | Applicable models |
|-------|--------------------------|--------------------------|
| WB101 | 127.2 x 130.2 x 46.2(mm) | X1、 3 series IP Phone |
| WB102 | 169 x 131 x 47 (mm) | X4、 5、 6 series IP Phone |

3. Physical specification


- 1) Place the bracket in the position to be installed and mark the position of the screw hole;
- 2) After removing the bracket, use an electric drill to drill the 2 holes at the marked.
- 3) Push or hammer screw anchors into the drilled holes, then insert 2 screws, as shown below:

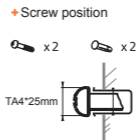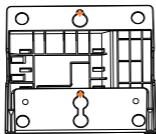


- 4) Insert the tabs on the wall mount bracket into the slots on the back of IP phone. And then slide the wall mount bracket to right, as shown below:

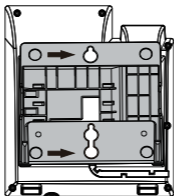

- 5) Pull the hookswitch tab in the handset cradle and rotate the hookswitch tab 180 degrees, then reinsert the hookswitch tab, as shown below:

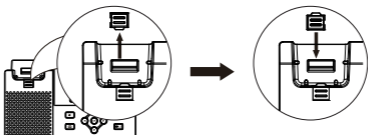

- 6) Finally, mount the IP phone to the wall, as shown below:

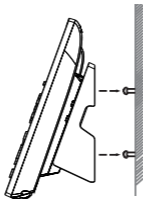

Fanvil